

Clearlight®

How To Change a Speaker

What You will Need:

- Phillip's Head Screw Driver
- Step Ladder
- Small Flat Edge

Important: Unplug the Sauna before starting. Our Sauna Speakers have changed over the years, but the steps to change them have primarily stayed the same.

Step 1: Start by removing the old speaker. Remove the mesh cap over the speaker inside your Sauna. Using a flat edge, wedge it under the mesh edge to pop it off, exposing the outer speaker ring and its four screws.

Step 2: The speaker is held in place to the ceiling by a plastic ring, unscrew this ring from the speaker.

Step 3: Using the Step Ladder go to the roof of the Sauna from the outside, unscrew all the necessary screws to lift the roof wood panels to expose the speaker.

Step 4: To remove the old speaker you must disconnect the two spade cables, which attaches the speaker to Sauna's electronics. Be careful when removing the spade connectors, make sure to pull them off from the metal not the wires as they can easily come loose.

Step 5: Reverse the above steps to secure the new Speaker making sure to pop the mesh cover back on once you have completed connecting the speaker on the roof and inside ceiling.


Below are helpful images illustrating the above process.



How To Change a Speaker



How To Change a Speaker

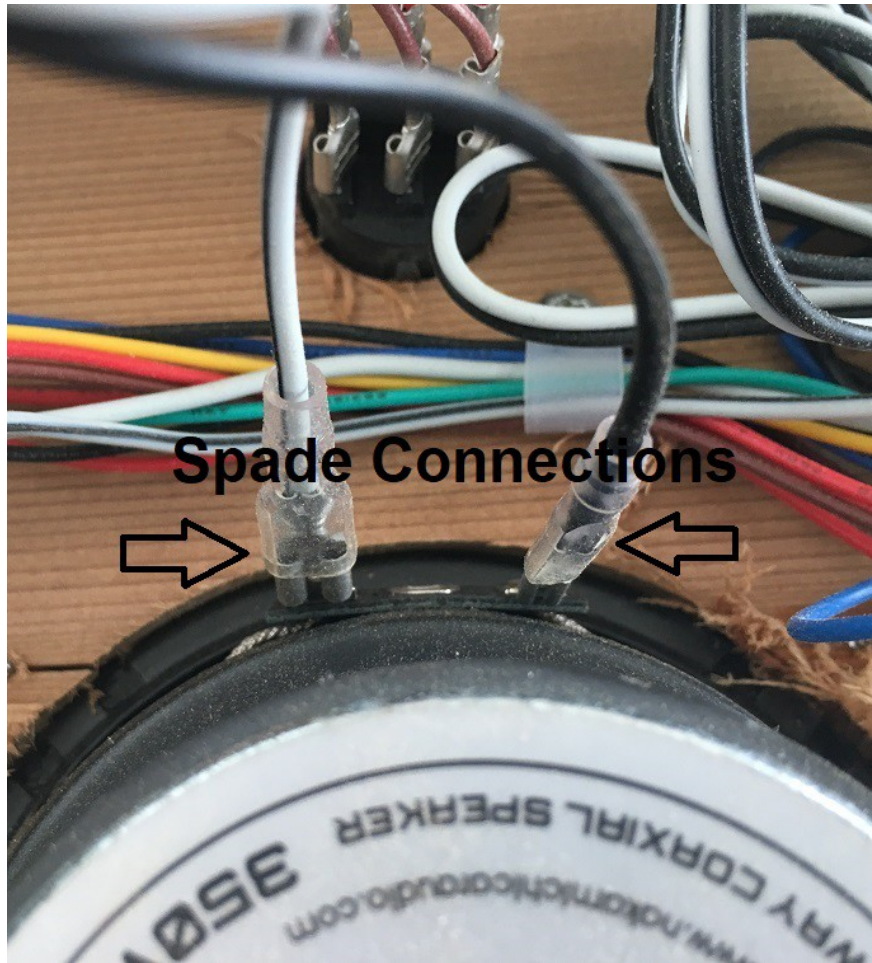

How To Change a Speaker