

Clearlight®

How To Disable/Install WiFi

What You will Need:

- Phillips Head Screwdriver
- Step Ladder

Important: Unplug the Sauna before starting.

Step 1: Using a step ladder locate the power supply on the roof of the Sauna. The power supply is underneath a square mesh vent, to access it will require unscrewing one side of the roof, usually the side where the power cord is located.



Step 2: The power supply is a large rectangle metal box, unscrew the four corner screws to gain access to the electronic components inside.

Step 3: The WiFi is a small circuit board. The best way to find it is to follow the outside antenna wire to the board. Simply pull the circuit board off the power supply, this will instantly disable the WiFi.


Step 4: On the circuit board is a small gold metal magnetic connector, by pulling this off it will free the WiFi antenna, allowing it to be removed as well.

Step 5: By removing these components you will only disable the WiFi capabilities of the Sauna nothing else will be affected. To re-enable the WiFi reattach the antenna and connect the WiFi circuit board to the power supply. Then plug the Sauna back into the outlet and hold the power button on the keypad for six seconds to reset the WiFi.

Below are images illustrating the above process.

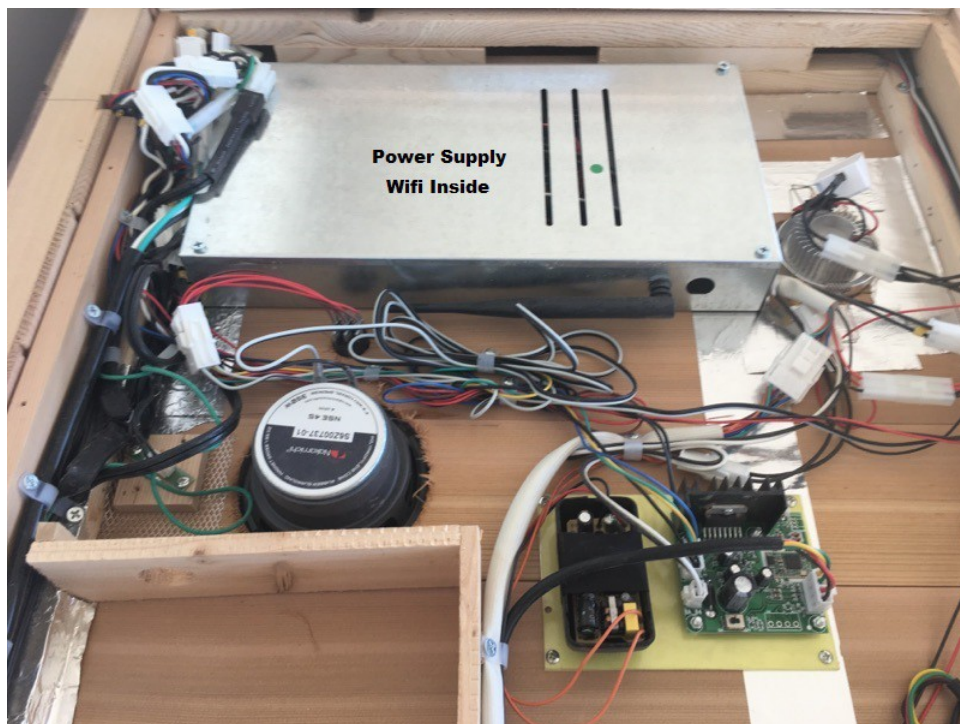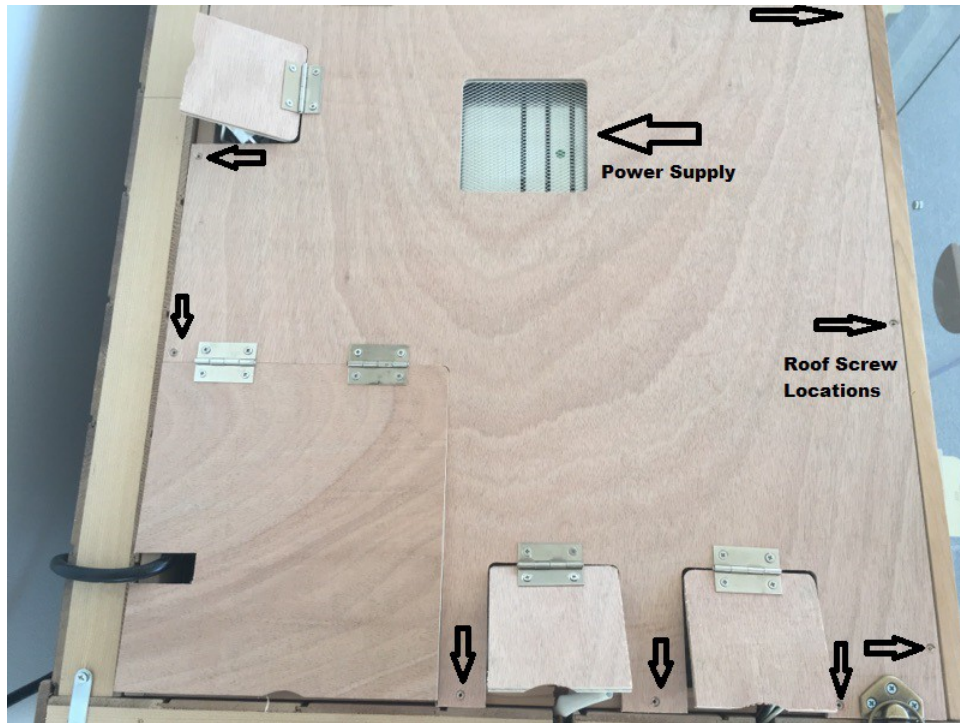

How To Disable/Install WiFi

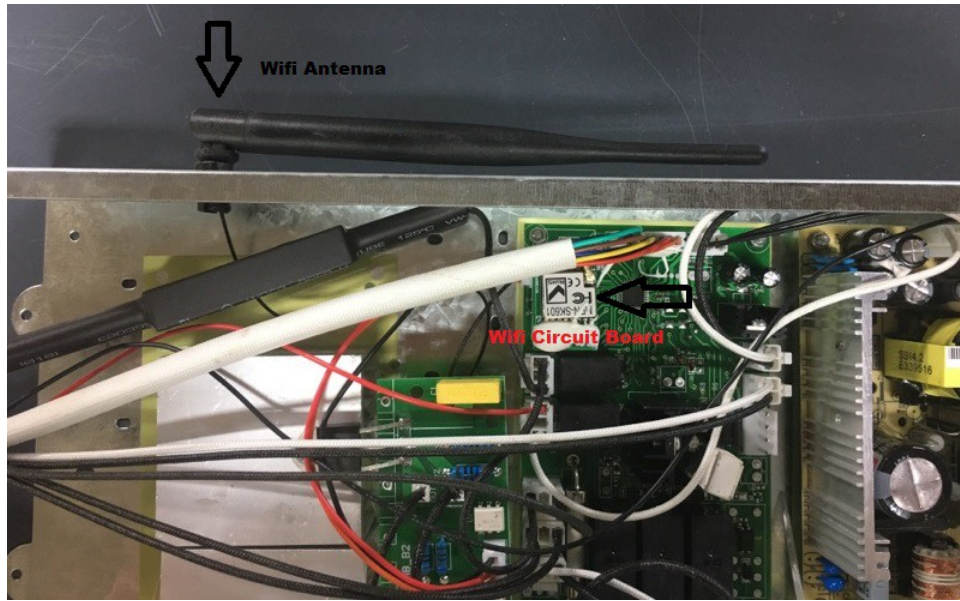

How To Disable/Install WiFi