




- 1** **Locate Battery Compartment** – On the back of the HALO ONE device.

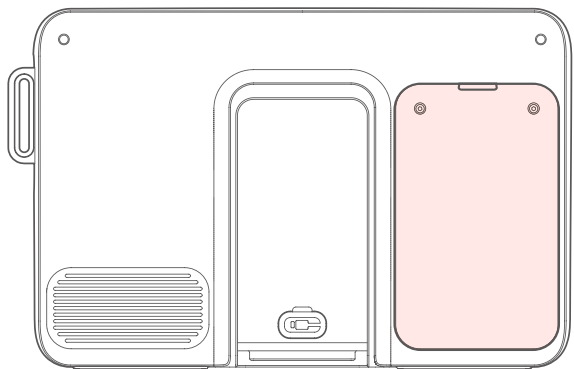


- 2** **Loosen Screws** – Use a screwdriver to loosen both screws on the battery cover.

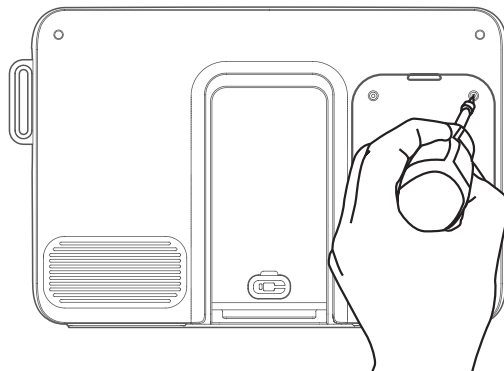


- 3** **Remove Cover** – Lift off the cover once the screws are loosened.

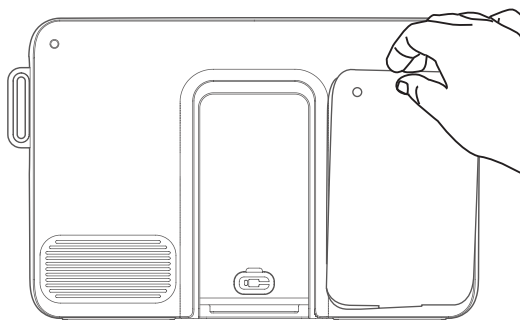


- 4** **Remove Battery** – Carefully pull out the battery. Adhesive may cause resistance.

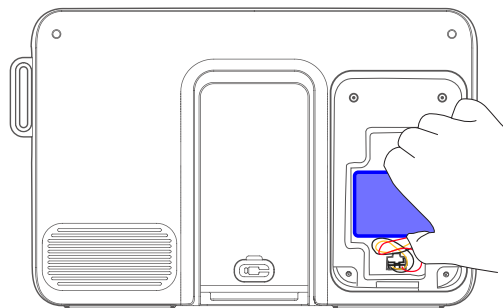

- 5** **Disconnect Battery** – Release the clip and unplug the battery.

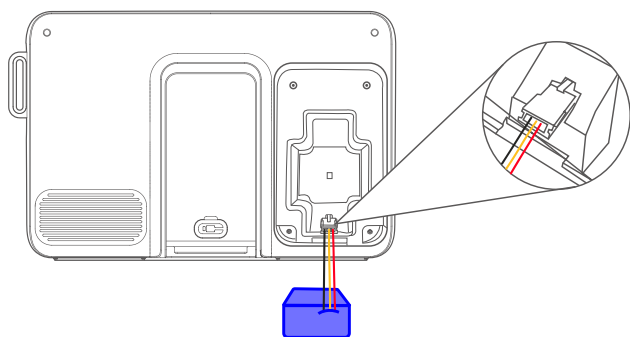


- 6** **Apply Sticker** – Place the provided 40mm transparent sticker inside the battery box on the back cover over the sensor.

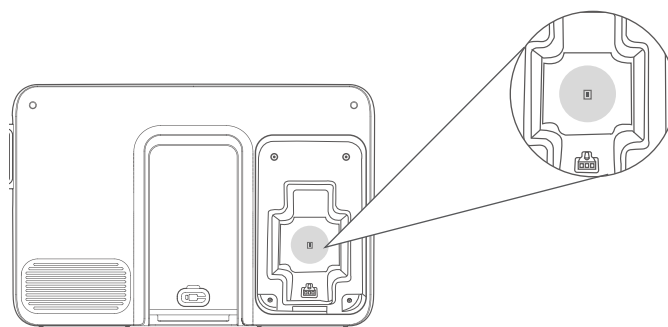


7

Connect New Battery – Attach the new battery connector until it clicks into place. Use needle-nose pliers if needed.

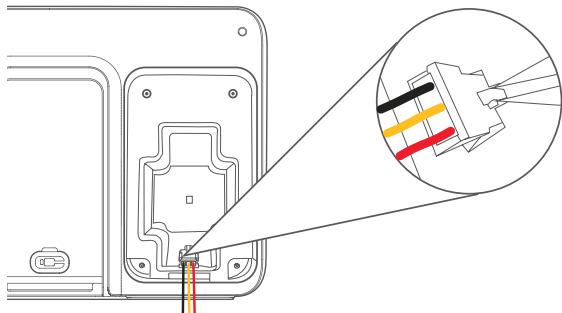


8

Insert Battery – Place the battery into the compartment.

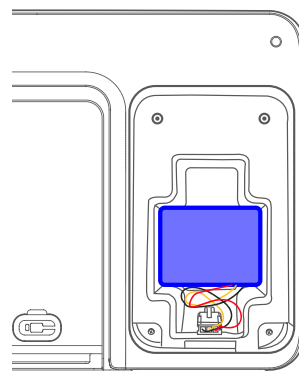

9

Replace Cover – Insert the bottom part of the cover first, then close fully.

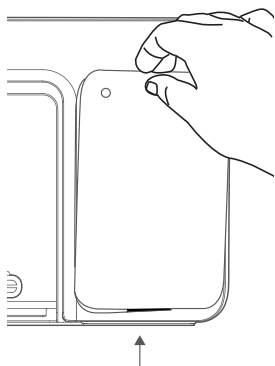

10

Tighten Screws – Secure the cover by tightening both screws.

