




- 1** **Locate Battery Compartment** – On the back of the HALO ONE device.

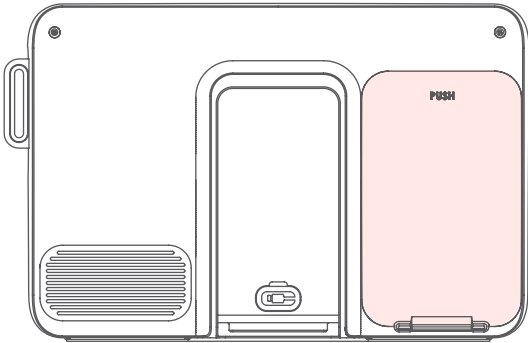


- 2** **Open Battery Cover** – Press and hold the push area until the cover pops up.

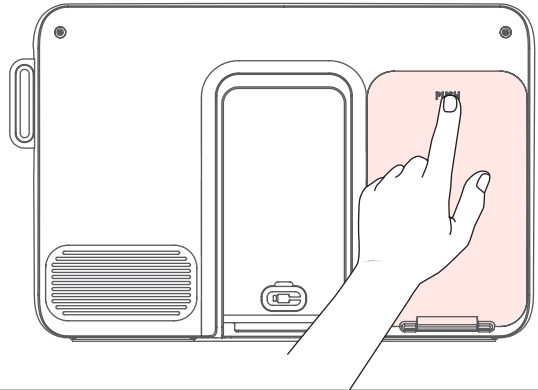


- 3** **Loosen Screws** – Use a screwdriver to loosen the two screws on the battery inner door.

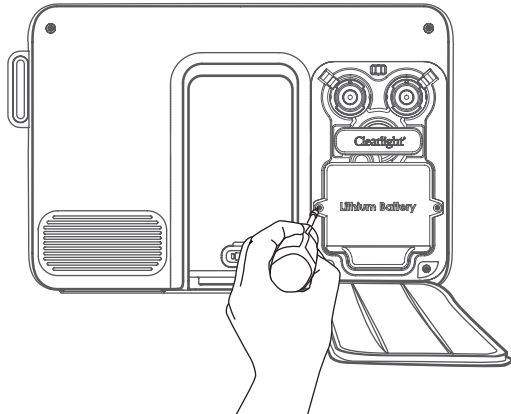


- 4** **Remove Inner Door** – Lift off the inner door once the screws are loosened.

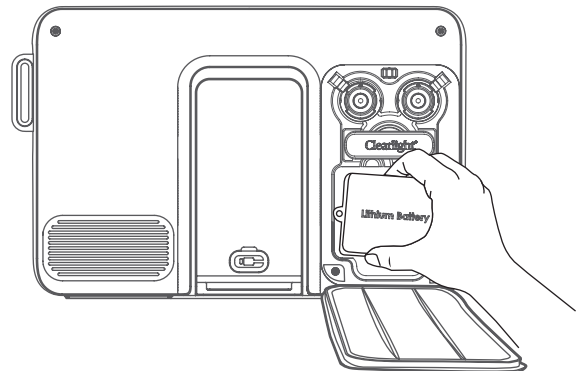


- 5** **Remove Battery** – Carefully pull out the battery. Adhesive may cause resistance.

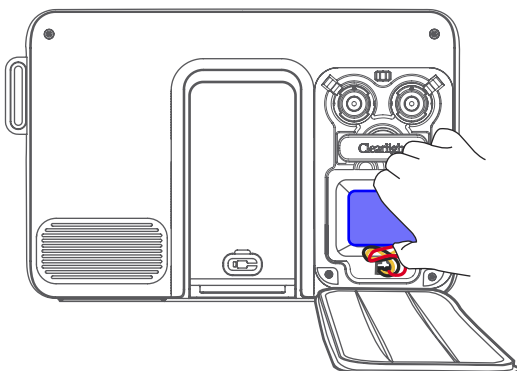


- 6** **Disconnect Battery** – Release the clip and unplug the battery.

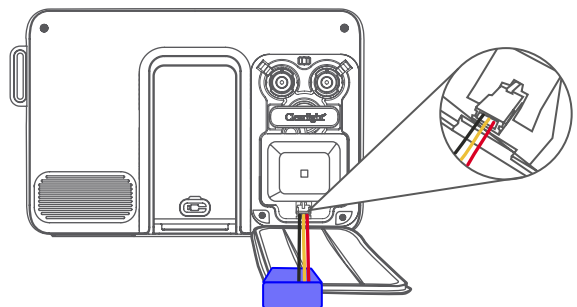


- 7** **Apply Sticker** – Place the provided 40mm transparent sticker inside the battery box on the back cover over the sensor.

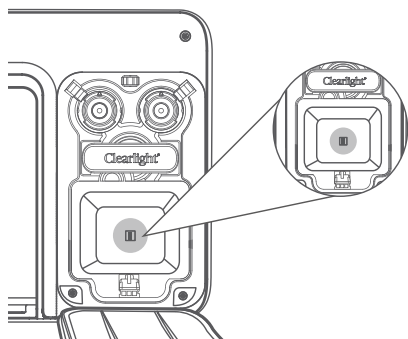


- 8** **Connect New Battery** – Attach the new battery connector until it clicks into place. Use needle-nose pliers if needed.

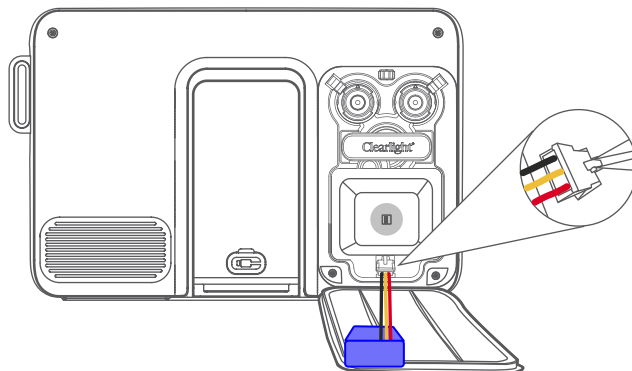

- 9** **Insert Battery** – Place the battery into the compartment.

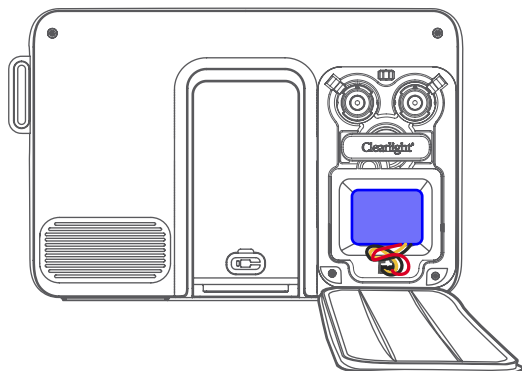

- 10** **Secure Inner Door** – Reattach the inner door and tighten both screws.

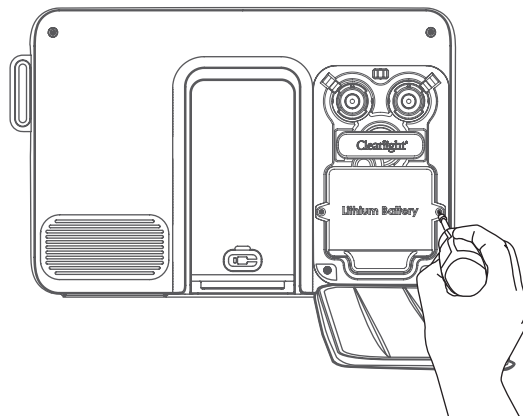

- 11** **Close Battery Cover** – Press and hold the push area until the cover snaps into place.

