

# Clearlight®

## How To Change a Power Supply

### **What You will Need:**

- Philips Head Screw Driver
- Step Ladder
- Wiring Diagram (Optional)

**Important: Unplug the Sauna before starting. All current Power Supplies are replaced the same way regardless of current Sauna models.**

**Step 1:** Using the step ladder go to the roof of the Sauna. The Power Supply is a metal rectangular silver box. The Power Supply is found under the corresponding “trap door” with a mesh square cut out.


**Step 2:** Unscrew corresponding roof panels to gain access to the Power Supply. Unscrew the four screws that attach the old Power Supply to the Sauna itself. DO NOT unhook any wire molex connectors or remove the old Power Supply yet.

**Step 3:** Take the new Power Supply and place on top the of old Power Supply. Match the new Power Supply with the corresponding wires and cords coming out of the old Power Supply. One side will have all male molex connectors and the other will have female molex connectors.

**Step 4:** Match connector to connector. Unconnect each molex connector one at a time and connect it to the new Power Supply. Once all connectors are connected to the new Power Supply slide the old Power Supply out, then screw down the new Power Supply to the Sauna.

**Step 5:** Double check all molex connectors are firmly connected to the new Power Supply, before screwing back down the roof wood panels and closing the any trap doors.

**Below are images illustrating the above process.**

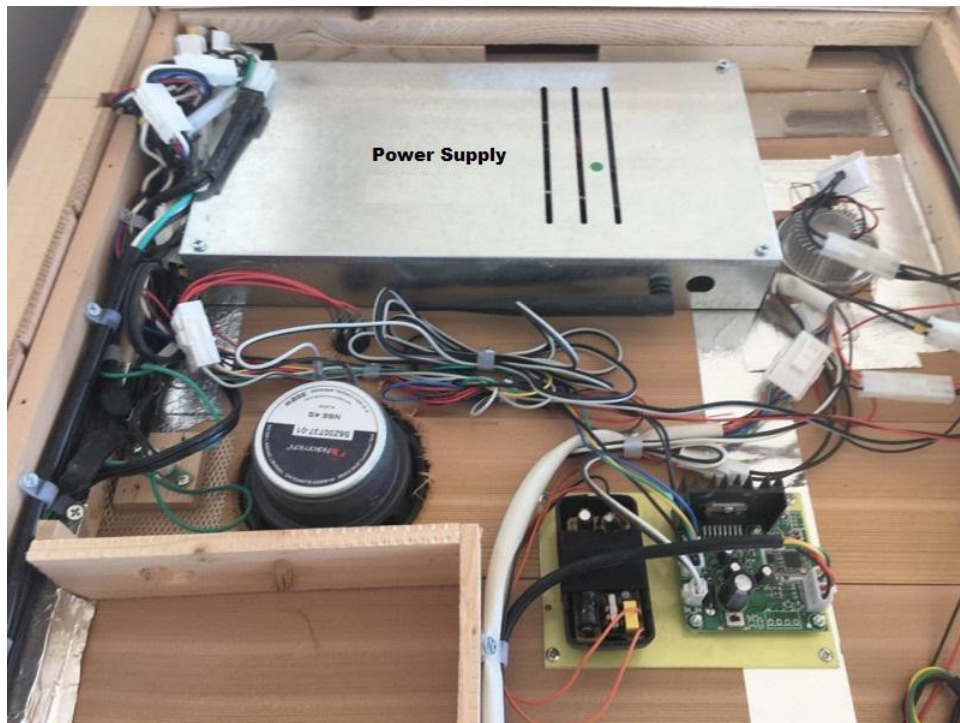

How To Change a Power Supply



Four Screws on each side of the Power Supply keep it attached to the inside of the Sauna.

Power Supply Sauna Screws

Power Supply Sauna Screws



Sit new power supply on top of old power supply to line up connectors.

Unconnect old power supply connectors and connect them to new power supply

## How To Change a Power Supply